



Datenblatt - Fiche technique - Data sheet

17.99.1140



VALUE Mini-PC-Halter schwarz

VALUE Support pour Mini PC noir

VALUE Mini PC Holder, black

CS-50 CPU Holder

- Before proceeding with installation of CPU Holder, read these instructions carefully and follow these procedures in sequence.
- Ensure that the desk is suitable for the installation of the CPU holder.
- Some CPUs are viewed differently from the detail drawing below.
- After discard the packaging check all the parts and fittings according to the check list as below. If you are missing any of the parts, please contact the store where you purchased your products. The staff will do their best to help you.

Components included with this Package:



- 01 CPU Holder ----- X1
- 02 Round Foam Pad ----- X3 set
- 03 Screw ----- X4

Note:
Tools Required (Not provided) Screw driver

Feature:
This CPU Holder is designed with limited weight capacity and dimension listed as follows:


- Weight capacity: 10 kg
- CPU Holder width extends from 50mm~100mm.
- CPU Holder height is available from 200mm~358mm.

Note:
Ensure the desired site for the holder permits the proper functions of the CPU Holder.

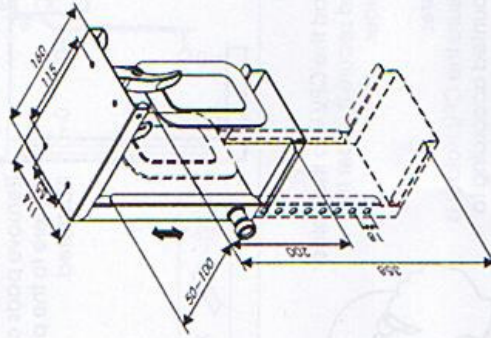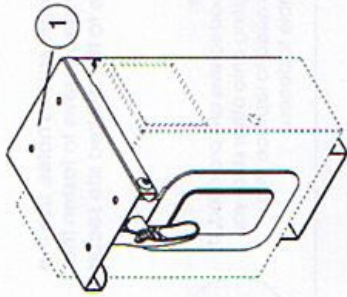


Assembly Guide


- 1 Mark the screws holes. Use the provided screws to fasten the glide to the desired site securely.

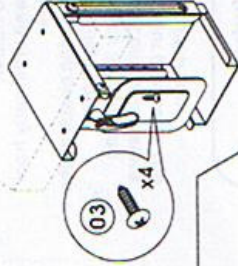

Note:
4 wood screws are provided. If installing onto other stud, you may need to replace with suitable fasteners.

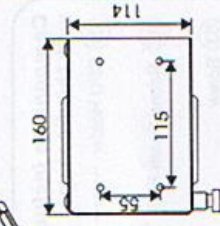


Remove pads cover, adhere to the places illustrated.

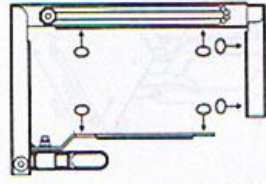

02 X3 set

- 2 Load the CPU into the holder and secure it under the holder.

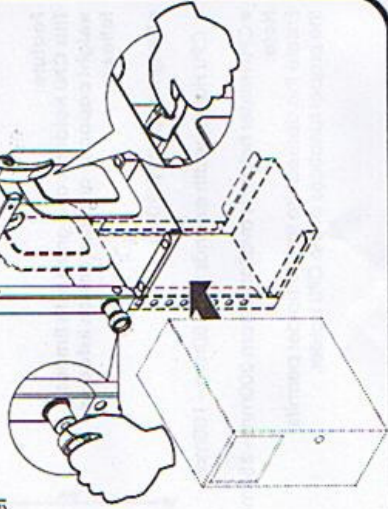

Note:
Ensure the CPU Holder is mounted according to manual to handle applied loads.